

 
## Setting favorite positions

Once the open and close limits are set, the motor can store two favorite positions. After setting the favorite positions, hold **FAVORITE 1** or **FAVORITE 2** button for 2 seconds to send the motor to the favorite position 1 or 2. If you also use either Neo Smart Blinds app or Neo Smart Blinds Blue app to control your blinds, please read the related topic in the bottom of this page.

### Setting favorite position 1

1. Use **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 1.


2. Press the **SET + FAVORITE 1** buttons at the same time. The motor will move to confirm that the favorite position 1 was saved.



### Setting favorite position 2

1. Use **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 2.

 
2. Press the **SET + FAVORITE 2** buttons at the same time. The motor will move to confirm that the favorite position 2 was saved.




### Delete all remote controls

**Attention:** this procedure does not delete open and close limits or the favorite positions 1 and 2.

 1. Hold the **HEAD** button for 3 seconds, until the motor moves.



 2. Hold the **HEAD** button for 7 seconds, until the motor moves.




## Favorite position in the Neo Smart Blinds and Neo Smart Blinds Blue apps

The favorite position 1 and 2 are accessible to the Smart Controller through the Neo Smart Blinds app. None of the favorite positions set via remote control are accessible to the Neo Smart Blinds Blue app, however you can easily set up a favorite position in the app.

## Remote control specifications

Transmission power: 10dBm  
ASK 433.92MHz wireless transmission  
Outdoor transmission distance: 200m  
Indoor transmission distance: 35m  
Working temperature: -20°C ~ +55°C  
Battery model: CR2450

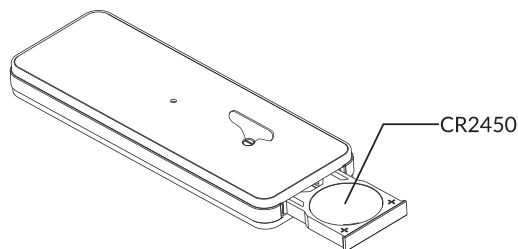


## Compatible products to automate your home



### Smart Controller

Control your blinds from anywhere using your phone or tablet. Voice commands are available if integrated with Amazon Alexa, Google Assistant or Siri Shortcuts.

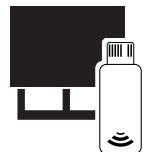

### Blue Link

Local control of your motorized blinds using your phone or tablet. Set schedules to automate your home. No need to connect to your Wi-fi or router.


For more information about our motors, remote controls and compatible products please visit our website. To buy one of these products, please contact your dealer.

[neosmartblinds.com](http://neosmartblinds.com)

*In case of problem or doubt, please contact your dealer.*

# NEO REMOTE CONTROL

Compatible with all Neo motors  
Version 5.0

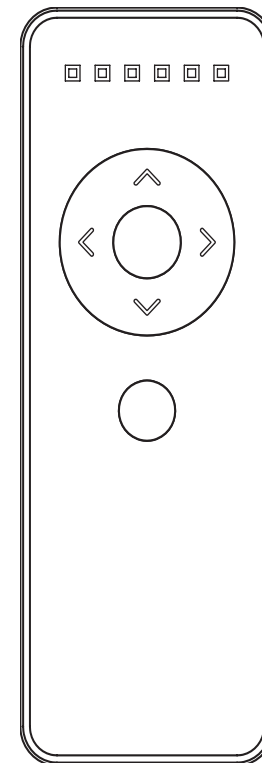


ENGLISH

Models  
RC-201  
RC-202  
RC-206

powered by Neo Smart Blinds

# Getting to know your Neo Remote Control

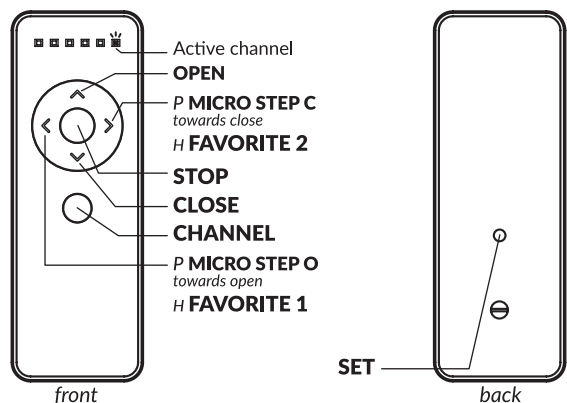

P - Press the button  
H - Hold the button for 2 seconds

## Basic operation

Unless noted, all commands are sent from a remote control to a motor, and will only have effect if the remote control's active channel has been paired with the desired motor.

Key	Description
Press <b>OPEN</b>	The motor moves all the way to the open limit <sup>1</sup> .
Press <b>CLOSE</b>	The motor moves all the way to the close limit <sup>1</sup> .
Press <b>STOP</b>	The motor stops any ongoing motion.
Press <b>MICRO STEP O</b>	The motor moves a small amount towards the open limit.
Press <b>MICRO STEP C</b>	The motor moves a small amount towards the close limit.
Hold <b>FAVORITE 1</b> for 2 seconds	The motor moves to the favorite position 1.
Hold <b>FAVORITE 2</b> for 2 seconds	The motor moves to the favorite position 2.
Press <b>CHANNEL</b>	The remote control cycles to the next channel (or group of channels), making it active <sup>2</sup> .

1 - The motor will stop on button release if the limit is not yet set.  
2 - This command is not sent to the motor, and affects only the remote control on which it is executed.

## Choosing a channel

In order for a remote control to execute commands on a motor, its active channel must be paired with that motor. Use the instructions below to choose a channel, then proceed to the pairing process.

 
 
1. Press the **CHANNEL** button as many times as needed to select the desired channel to pair the motor.



## Pairing process



### Set remote control channel using the button on the HEAD

1. Hold the **HEAD** button for 3 seconds, until the motor quickly moves.
2. Press the **SET** button on the back of the remote control, the motor will move to confirm the operation.



### Copy remote control channel

 1. Using a previously programmed remote control (A), hold the **SET** button on the back of the remote control for 3 seconds, until the motor quickly moves.
2. Using the new remote control (B), press **SET** button on the back of the remote control, the motor will move to confirm the new remote/channel was paired.

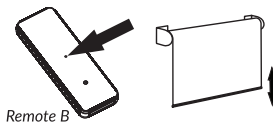

## Reverse direction

1. Hold the **SET** button on the back of the remote control for 3 seconds. The motor will quickly move to indicate the process has started.
2. Press the **CHANNEL + STOP** buttons at the same time, the motor will move to confirm the operation.

 


## Setting or adjusting limits


The motor's open and close limits are set individually.

### Open limit

1. Hold the **SET + OPEN** buttons at the same time for 3 seconds. The motor will move to indicate the process to set up the open limit has started.



 
2. Use **OPEN** and **CLOSE** buttons to go to the desired open position.




3. Press **SET** button on the back of the remote control, the motor will move to confirm that the new open limit position has been saved.

### Close limit

 1. Hold the **SET + CLOSE** buttons at the same time for 3 seconds. The motor will quickly move to indicate the process to set up the close limit has started.



 
2. Use **OPEN** and **CLOSE** buttons to go to the desired close position.



3. Press **SET** button on the back of the remote control, the motor will move to confirm that the new close limit position has been saved.

### Delete limits

 1. Hold the **SET + STOP** buttons at the same for 3 seconds. The motor will move to indicate the limits have been deleted.



**Don't forget to always select the correct channel of the motor you want to adjust.**