

 
Setting favorite positions

Once the open and close limits are set, the motor can store two favorite positions. After setting the favorite positions, hold **FAVORITE 1** or **FAVORITE 2** button for 2 seconds to send the motor to the favorite position 1 or 2.

Setting favorite position 1

1. Use the **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 1.


2. Press the **SET + FAVORITE 1** buttons at the same time. The motor will move to confirm that the favorite position 1 was saved.



Setting favorite position 2

1. Use the **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 2.

 2. Press the **SET + FAVORITE 2** buttons at the same time. The motor will move to confirm that the favorite position 2 was saved.




Touch Control


Only curtain motors have this feature and it comes enabled from the factory. To open or close the curtains using the touch control, hold one of the curtains panels and give it a firm tug towards the open or close position.

Enabling touch control

 1. Hold the **OPEN + STOP** buttons for 3s. The motor will move and the LED on the motor head will turn on.




 2. **Within 3 seconds**, press the **SET** button. The motor will move and the LED on the motor head will turn off to confirm that the touch control mode is enabled.




Disabling touch control

 1. Hold the **STOP + CLOSE** buttons for 3s. The motor will move and the LED will turn on.



 2. **Within 3 seconds**, press the **SET** button. The motor will move and the LED will turn off to confirm that the touch control mode is disabled.



Wall remote control specifications

Transmission power: 10dBm
 ASK 433.92MHz wireless transmission
 Outdoor transmission distance: 200m
 Indoor transmission distance: 30m
 Working temperature: -20°C ~ +55°C
 Battery model: CR2032

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

Basic operation


Unless noted, all commands are sent from a wall remote control to a motor, and will only have effect if the remote control's active channel has been paired with the desired motor.

Key Combination	Description
Press OPEN	The motor moves all the way to the open limit. ¹
Press CLOSE	The motor moves all the way to the close limit. ¹
Press STOP	The motor stops any ongoing motion.
Press MICRO STEP O	The motor moves a small amount towards the open limit.
Press MICRO STEP C	The motor moves a small amount towards the close limit.
Hold FAVORITE 1 for 2 seconds	The motor moves to the favorite position 1.
Hold FAVORITE 2 for 2 seconds	The motor moves to the favorite position 2.
Press PREVIOUS CHANNEL	The wall remote control goes to the previous channel, making it active. ²
Press NEXT CHANNEL	The wall remote control goes to the next channel, making it active. ²
Press PREVIOUS CHANNEL and NEXT CHANNEL at the same time	The wall remote control selects all channels, making them active. ²

1 - The motor will stop on button release if the limit is not yet set.
 2 - This command is not sent to the motor, and affects only the wall remote control on which it is executed.

NEO WALL REMOTE CONTROL

Compatible with all Neo motors, except TM-WO and TM-WB motors
 Version 3.0

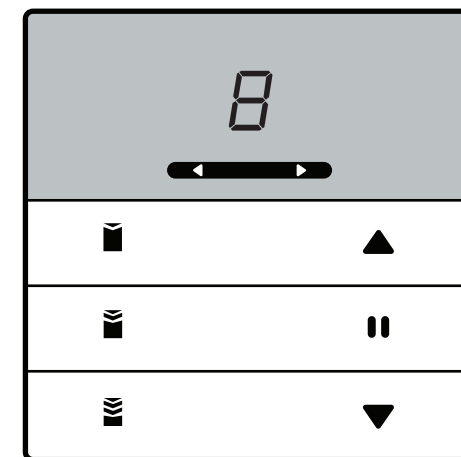


ENGLISH

Models
 WS-208

powered by Neo Smart Blinds

Getting to know your Neo Wall Remote Control

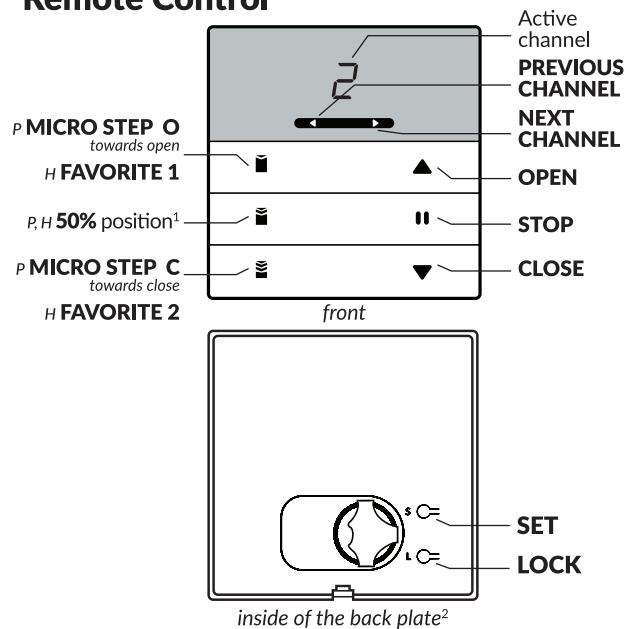

P - Press the button

H - Hold the button for 2 seconds


1 - Not supported by motors manufactured before 2018 inclusive.

2 - To access this part, insert a flathead screwdriver into the groove at the bottom to pry open the back cover.

Locking the number of channels

Cycle quicker through the channels in use by locking the number of channels.


1. Press the **LOCK** button on the back of the wall remote control.

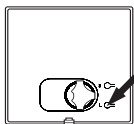

2. Press the **PREVIOUS CHANNEL** or the **NEXT CHANNEL** buttons as many times as needed to select the desired number of channels to have.




3. Wait for the display to turn off and save the number of channels selected.

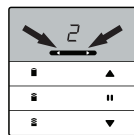

Choosing all channels

1. Press the **PREVIOUS CHANNEL + NEXT CHANNEL** buttons at the same time to select all channels.

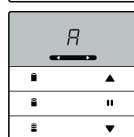

2. The letter **A** will show up on the display to indicate that commands will be broadcasted to all motors paired to the wall remote control.

Choosing a channel

In order for a wall remote control to execute commands on a motor, its **active channel must be paired with that motor**. Use the instructions below to choose a channel, then proceed to the pairing process.

 
1. Press the **PREVIOUS CHANNEL** or the **NEXT CHANNEL** buttons as many times as needed to select the desired channel to pair the motor.




Pairing process

Using the button on the HEAD of the motor

1. Hold the **HEAD** button for 3 seconds, until the motor quickly moves up and down.




2. Press the **SET** button on the back of the wall remote control, the motor will move up and down to confirm the operation.

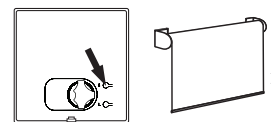


Copying from another remote control channel

1. Using a previously programmed remote control (A), hold the **SET** button on the back of its case for 3 seconds, until the motor moves.

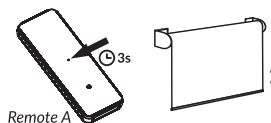


2. Using a new remote control (B), press **SET** button on the back of its case, the motor will move up and down to confirm the new remote channel was paired.

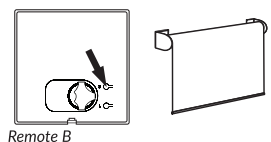


Note: this procedure is the same regardless the model of the remote control used on both steps.

Reverse direction

1. Hold the **SET** button on the back of the remote control for 3 seconds. The motor will move to indicate the process has started.

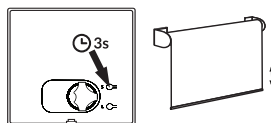

2. Press the **PREVIOUS CHANNEL + STOP** buttons at the same time, the motor will move to confirm the operation.

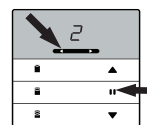


Don't forget to always select the correct channel of the motor you want to adjust.

Setting or adjusting limits


The motor's open and close limits are set individually except for certain motors which will automatically set their open and close limits during their first usage.

Open limit

1. Hold the **SET + OPEN** buttons at the same time for 3 seconds. The motor will move to indicate the process to set up the open limit has started.

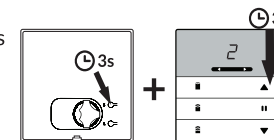

 
2. Use the **OPEN, STOP** and **CLOSE** buttons to go to the desired open position.




3. Press **SET** button on the back of the wall remote control, the motor will move to confirm that the new open limit position has been saved.

Close limit

1. Hold the **SET + DOWN** buttons at the same time for 3 seconds. The motor will move to indicate the process to set up the close limit has started.

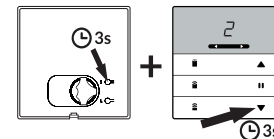

 
2. Use the **OPEN, STOP** and **CLOSE** buttons to go to the desired lower position.



3. Press **SET** button on the back of the wall remote control, the motor will move to confirm that the new close limit position has been saved.

Delete limits


1. Hold the **SET + STOP** buttons at the same time for 3 seconds. The motor will move to indicate the limits have been deleted.

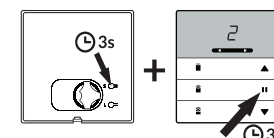

Delete all remote controls

Note: this procedure does not delete open and close limits or the favorite positions 1 and 2.

 1. Hold the **HEAD** button for 3 seconds, until the motor moves, then release it.



2. Hold the **HEAD** button for 7 seconds, until the motor moves.

